

# DENON

POWER AMPLIFIER

# POA-A1HDCI

---

Owner's Manual

## SAFETY PRECAUTIONS



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



**CAUTION:**  
**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:**  
**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### CAUTION:

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.

The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

### PRECAUTION:

Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale.

La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

## IMPOTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## FCC INFORMATION (For US customers)

### 1. PRODUCT

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

### 2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the product.

### 3. NOTE





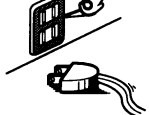



This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

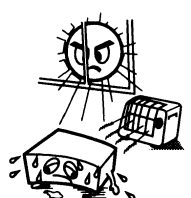This Class B digital apparatus complies with Canadian ICES-003.  
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## NOTE ON USE / OBSERVATIONS RELATIVES A L'UTILISATION

 <ul style="list-style-type: none"> <li>• Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack.</li> <li>• Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.</li> </ul>	 <ul style="list-style-type: none"> <li>• Keep the unit free from moisture, water, and dust.</li> <li>• Protéger l'appareil contre l'humidité, l'eau et la poussière.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let foreign objects into the unit.</li> <li>• Ne pas laisser des objets étrangers dans l'appareil.</li> </ul>
 <ul style="list-style-type: none"> <li>• Handle the power cord carefully. Hold the plug when unplugging the cord.</li> <li>• Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.</li> </ul>	 <ul style="list-style-type: none"> <li>• Unplug the power cord when not using the unit for long periods of time.</li> <li>• Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.</li> </ul>	 <ul style="list-style-type: none"> <li>• Do not let insecticides, benzene, and thinner come in contact with the unit.</li> <li>• Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.</li> </ul>
	 <ul style="list-style-type: none"> <li>* (For apparatuses with ventilation holes)</li> <li>• Do not obstruct the ventilation holes.</li> <li>• Ne pas obstruer les trous d'aération.</li> </ul>	 <ul style="list-style-type: none"> <li>• Never disassemble or modify the unit in any way.</li> <li>• Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.</li> </ul>

### CAUTION:

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- Observe and follow local regulations regarding battery disposal.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.

### ATTENTION:

- La ventilation ne doit pas être gênée en recouvrant les ouvertures de la ventilation avec des objets tels que journaux, rideaux, tissus, etc.
- Aucune flamme nue, par exemple une bougie, ne doit être placée sur l'appareil.
- Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées.
- L'appareil ne doit pas être exposé à l'eau ou à l'humidité.
- Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil.

## Contents

### Getting Started

<b>Accessories</b> .....	1
<b>Cautions on Handling</b> .....	1
<b>Cautions on Installation</b> .....	2
<b>Preparations</b> .....	2
<b>Part Names and Functions</b> .....	3
Front Panel .....	3
Rear Panel .....	4

### Connections and Settings

<b>Preparations</b> .....	5
Cables Used for Connections .....	5
Connecting the speaker cables .....	5
<b>Settings</b> .....	6
Change the input mode .....	6
Change the operation mode .....	6
Change the control mode .....	6
<b>Connect to AVP-A1HDCI</b> .....	7
Connecting to an RCA input terminal .....	7
Connecting to an XLR input terminal .....	7
<b>Connecting 2 POA-A1HDCI units to the AVP-A1HDCI</b> .....	8
Settings .....	8
<b>Settings and Connections</b> .....	9
Normal Connections .....	9
Bi-Amp Connections .....	10
Bridge Connections .....	11
<b>Connecting the External Controller</b> .....	12
<b>Connecting the Power Cord</b> .....	12
<b>Once Connections are Completed</b> .....	12

### Operations

<b>Turning the Power On</b> .....	13
<b>Select the channel to display on the channel level meter</b> .....	13
<b>Set the channel level meter</b> .....	13

### Troubleshooting 14

### Specifications 14

## THX Ultra2™

Before any home theater component can be THX Ultra2 certified, it must incorporate all the features above and also pass a rigorous series of quality and performance tests. Only then can a product feature the THX Ultra2 logo, which is your guarantee that the Home Theater products you purchase will give you superb performance for many years to come. THX Ultra2 requirements cover every aspect of the product including power amplifier performance, pre-amplifier performance and operation, as well as hundreds of other parameters in both the digital and analog domain.

In addition to improvements to the power amplifier with respect to previous THX Ultra standards, three surround modes have been added: the THX Ultra2 Cinema mode, THX Music Mode and THX Games Mode.

※ "THX" and "Ultra2" are trademarks of THX Ltd. THX may be registered in some jurisdictions. All rights reserved.

※ In the NORMAL connection and Bi-AMP connection operation mode, POA-A1HDCI has acquired THX certification. To play back data in a manner that complies with the THX standard, use the NORMAL connection or Bi-AMP connection mode.

## Getting Started


Thank you for purchasing this DENON product. To ensure proper operation, please read this owner's manual carefully before using the product.

After reading them, be sure to keep them for future reference.

## Accessories

Check that the following parts are supplied with the product.

- ① Owner's manual ..... 1
- ② Warranty (for North America model only) ..... 1
- ③ Service station list ..... 1
- ④ Power cord (Cord length: Approx. 5 ft / 1.5 m) ..... 1
- ⑤ Control link cable (Cord length: Approx. 10 ft / 3 m) ..... 1

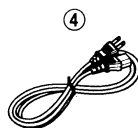

## Cautions on Handling

### • Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

### • About condensation

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

### • Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.

### • Moving the unit

Turn off the power and unplug the power cord from the power outlet.


Next, disconnect the connection cables to other system units before moving the unit.

- Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

## Cautions on Installation

### Note:

For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.

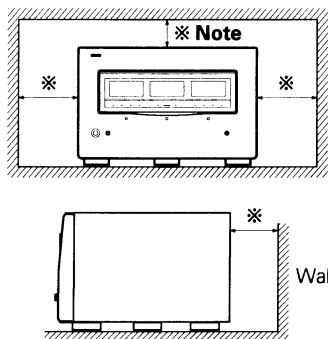


### NOTE

- Since this unit is very heavy, when installing it on a rack etc, the maximum load capacity of the rack should always be checked first. Please refer to the user manual for the rack for the maximum load capacity.
- Always have at least two people work together to move the POA-A1HDCI.

## Preparations


Before using this unit, the following steps should be followed, according to the situation in which the unit will be used.

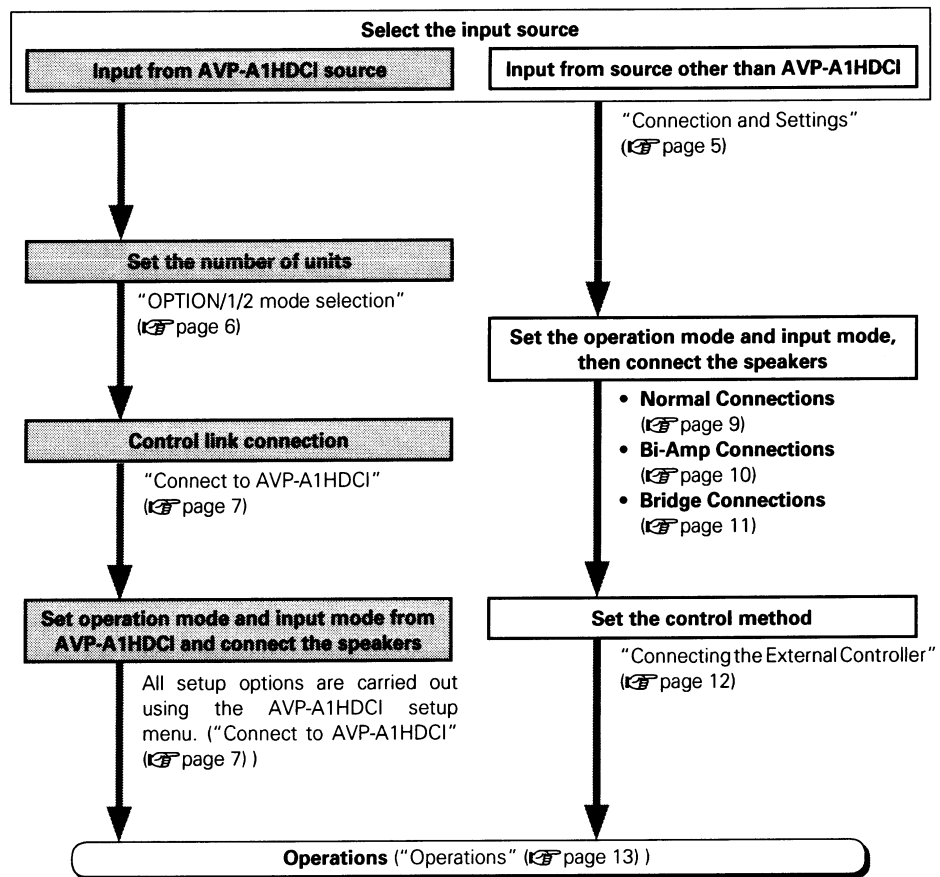

## Part Names and Functions

For buttons not explained here, see the page indicated in parentheses ( ).

### Front Panel

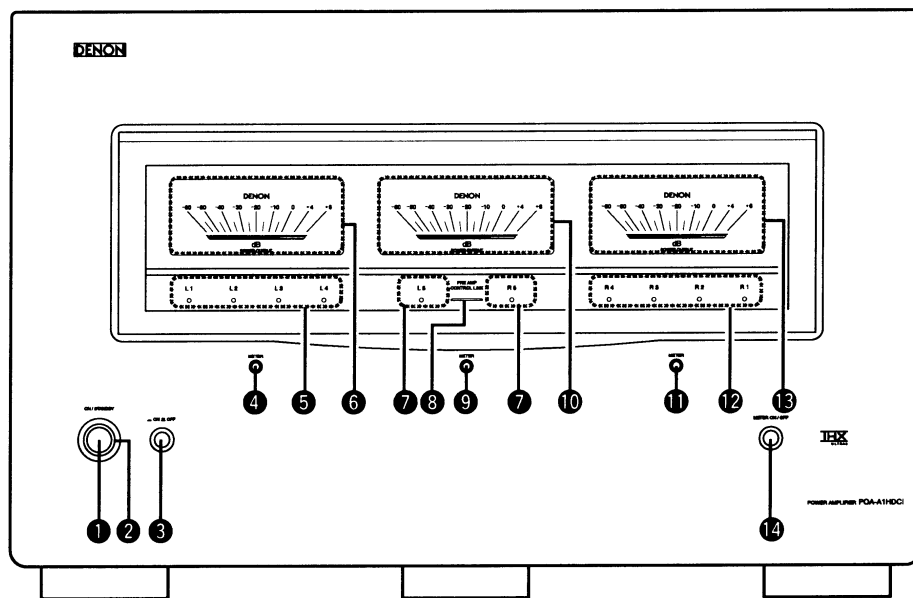

- |   |      |  |      |
|---|------|--|------|
| ① Power operation button (ON/STANDBY) .....               | (13) | ⑧ PRE AMP CONTROL LINK indicator .....                     | (6)  |
| ② Power indicator .....                                   | (13) | ⑨ Center channel meter select button (METER) .....         | (13) |
| ③ Power switch (ON/OFF) .....                             | (13) | ⑩ Center channel level meter .....                         | (13) |
| ④ Left channel meter select button (METER) .....          | (13) | ⑪ Right channel meter select buttons (METER) .....         | (13) |
| ⑤ Left channel meter indicators (L1 / L2 / L3 / L4) ..... | (13) | ⑫ Right channel meter indicators (R1 / R2 / R3 / R4) ..... | (13) |
| ⑥ Left channel level meter .....                          | (13) | ⑬ Right channel level meter .....                          | (13) |
| ⑦ Center channel meter indicators (L5 / R5) .....         | (13) | ⑭ METER ON/OFF button .....                                | (13) |

#### ■ About channel level meter

You can select the output level (dB indicator) of each power amp channel to check the meter.

If a sine wave is input, the output power for the meter indicator is as shown in the following table.

- When NORMAL connection or Bi-AMP connection is used

Output indicator	4 Ω/ohms load	6 Ω/ohms load	8 Ω/ohms load
0 (dB)	300 (W)	200 (W)	150 (W)
-10 (dB)	30 (W)	20 (W)	15 (W)
-20 (dB)	3 (W)	2 (W)	1.5 (W)
-30 (dB)	300 (mW)	200 (mW)	150 (mW)
-40 (dB)	30 (mW)	20 (mW)	15 (mW)
-50 (dB)	3 (mW)	2 (mW)	1.5 (mW)

- When BRIDGE connection is used


Output indicator	4 Ω/ohms load	6 Ω/ohms load	8 Ω/ohms load
0 (dB)	1200 (W) ※	800 (W) ※	600 (W) ※
-10 (dB)	120 (W)	80 (W)	60 (W)
-20 (dB)	12 (W)	8 (W)	6 (W)
-30 (dB)	1200 (mW)	800 (mW)	600 (mW)
-40 (dB)	120 (mW)	80 (mW)	60 (mW)
-50 (dB)	12 (mW)	8 (mW)	6 (mW)

※ Possible output by POA-A1HDCI is up to the rated output.

#### NOTE

When outputting a program source that has data such as SACD, which is higher than the audible band, the indicator moves differently than the volume you hear.

## Rear Panel

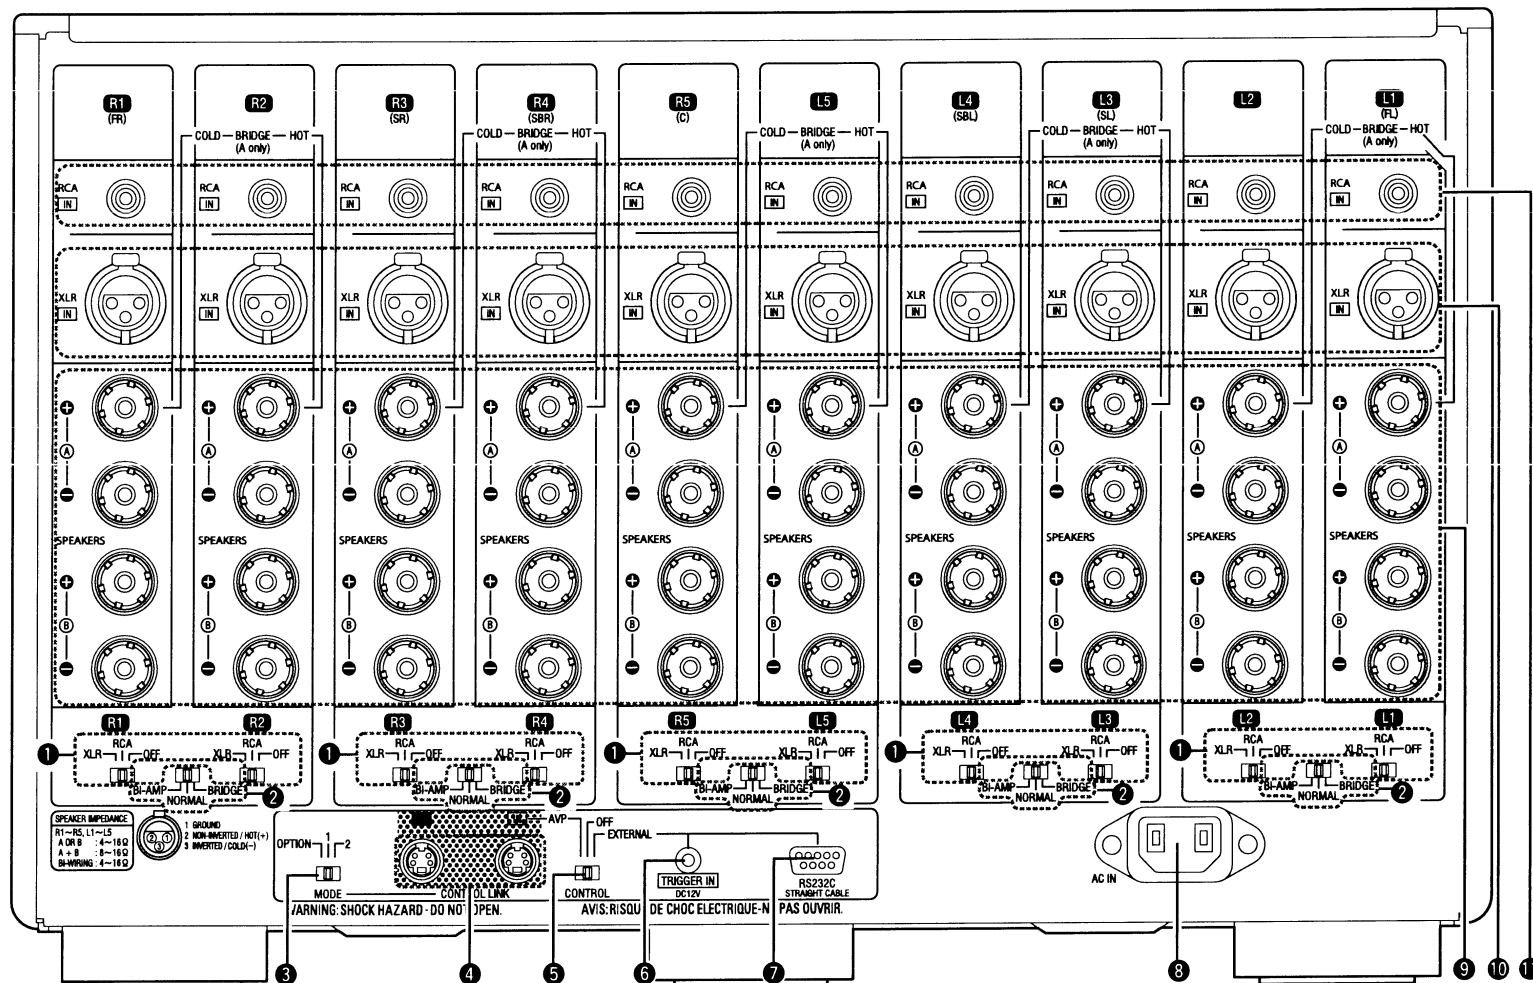

- ① Input select switches ..... (6)
- ② Operation mode select switch ..... (6)
- ③ Mode select switch (MODE) ..... (6)
- ④ CONTROL LINK connectors ..... (7, 8)
- ⑤ Control select switch (CONTROL) ..... (6)
- ⑥ TRIGGER IN jack ..... (12)
- ⑦ RS-232C connector ..... (12)
- ⑧ AC inlet (AC IN) ..... (12)
- ⑨ Speaker terminals (SPEAKERS) ..... (5, 7, 9 ~ 11)
- ⑩ XLR input connectors ..... (7, 9 ~ 11)
- ⑪ RCA input connectors ..... (7, 9 ~ 11)

### NOTE

The ① ~ ③ and ⑤ must be set before turning the power on. Settings which are changed after powering on will not be registered. In such cases, the power should be switched off and on again.

## Connections and Settings

Connections for all compatible audio signal formats are described in these operating instructions. Please select the types of connections suited for the equipment you are connecting. With some types of connections, certain settings must be made on the POA-A1HDCI. For details, refer to the instructions for the respective connection items below.


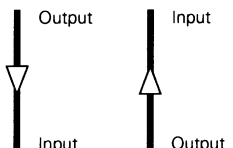

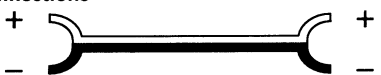
### NOTE

- Do not plug in the power cord until all connections have been completed.
- When making connections, also refer to the operating instructions of the other components.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Do not bundle power cords together with connection cables. Doing so can result in humming or noise.

## Preparations

### Cables Used for Connections

Select the cables according to the equipment being connected.

Audio cables	Signal direction
<b>Analog connections (XLR)</b>  Balanced cable	Audio signal:  Input      Output
<b>Analog connections (RCA)</b>  Pin-plug cable	
<b>Speaker connections</b>  Speaker cables	

### Connecting the speaker cables

Carefully check the left (L) and right (R) channels and + (red) and – (black) polarities on the speakers being connected to the POA-A1HDCI, and be sure to interconnect the channels and polarities correctly.

 
- 1 Peel off about 0.03 ft / 10 mm of sheathing from the tip of the speaker cable, then either twist the core wire tightly or terminate it.



- 2 Turn the speaker terminal counterclockwise to loosen it.



- 3 Insert the speaker cable's core wire to the hilt into the speaker terminal.




- 4 Turn the speaker terminal clockwise to tighten it.



### When using a banana plug

Tighten the speaker terminal firmly before inserting the banana plug.

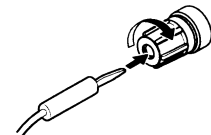

### NOTE

- Connect the speaker cables in such a way that they do not stick out of the speaker terminals. The protection circuit may be activated if the core wires touch the rear panel or if the + and – sides touch each other (Protection circuit).
- Never touch the speaker terminals while the power supply is connected. Doing so could result in electric shock.

### Protection circuit

If speakers with an impedance lower than specified are used for an extended period of time with the volume turned up high, the temperature may rise, activating the protection circuit.

When the protection circuit is activated, the speaker output is shut off and the power indicator flashes red. If this happens, unplug the power cord, then check the speaker cable and input cable connections. If the set is extremely hot, wait for it to cool off and improve ventilation around it. Once this is done, plug the power cord back in and turn the set's power back on.

If the protection circuit is activated again even though there are no problems in the ventilation around the set nor in the connections, the set may be damaged. Turn the power off, then contact a DENON service center.




## Settings

### NOTE

The **MODE**, **CONTROL**, **Operation mode select switch** and **Input select switch** must be set before turning the power on. Settings which are changed after powering on will not be registered. In such cases, the power should be switched off and on again.

[Rear panel]

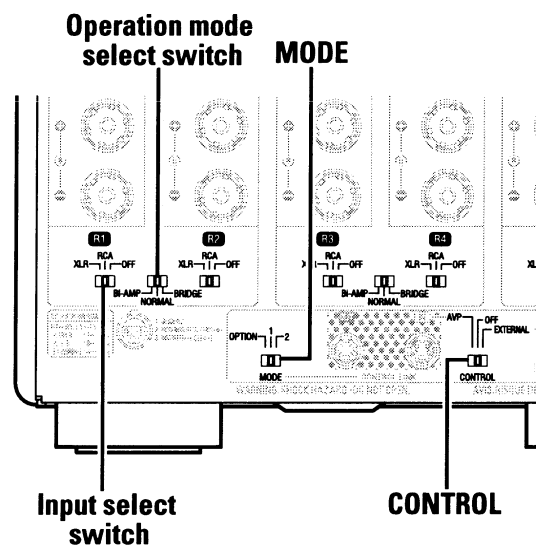

## Change the input mode

Change the input mode for each channel (L1 ~ L5, R1 ~ R5).

### Set the Input select switch.

- **XLR** : Use XLR terminal.
- **RCA** : Use RCA terminal.
- **OFF** : Channel is not used.

### NOTE

- When the input and **Input select switch** setting on the unit are different, the unit does not operate.
- If **CONTROL** is set to "AVP", this setting is invalid.

## Change the operation mode

Change the operation mode for each channel (L1 ~ L5, R1 ~ R5) or pair channel (L1 / L2, L3 / L4, L5 / R5, R1 / R2, R3 / R4).

### Bi-AMP / NORMAL / BRIDGE mode selection

Set how to use the power amp with each channel.

### Set the Operation mode select switch.

- **Bi-AMP** : Used for Bi-Amp connection.
- **NORMAL** : Used for NORMAL connection.
- **BRIDGE** : Used for BRIDGE connection.

### NOTE

- Channels that have the input mode set to "OFF" can not be selected.
- If **CONTROL** is set to "AVP", this setting is invalid.

## Change the control mode

Select the option suited for the equipment operating the unit.

### Select CONTROL.

- **AVP** : Operates the unit from the AVP-A1HDCI (page 7).
- **OFF** : Control mode is not used.
- **EXTERNAL** : Operates the unit from equipment connected to the RS-232C connector or TRIGGER IN jack (page 12).



When **CONTROL** is set to "AVP", the PRE AMP CONTROL LINK indicator lights in blue.

### OPTION / 1 / 2 mode selection

Use control link to connect POA-A1HDCI and AVP-A1HDCI and switch POA-A1HDCI according to the number of units to be connected.

### Select MODE.

- **OPTION** : For future use, if the range of functions is expanded.
- **1** : Used as the first unit when one POA-A1HDCI unit is used or two POA-A1HDCI units are connected.
- **2** : Used as the second unit when two POA-A1HDCI units are connected.

## Connect to AVP-A1HDCI

This example shows the connection of an AV sound preamplifier AVP-A1HDCI (sold separately) to the unit.


To operate POA-A1HDCI from AVP-A1HDCI, connect the control link cable, set **CONTROL** switch to "AVP" and then set **MODE** switch to "1".

- Please refer to the AVP-A1HDCI owner's manual for setup and operation instructions.
- When connecting, please also refer to the AVP-A1HDCI owner's manual.

**NOTE** Always set the **Input select switch** for channels not in use to "OFF".


## Connecting to an RCA input terminal

Example: 7-channels (NORMAL setting)

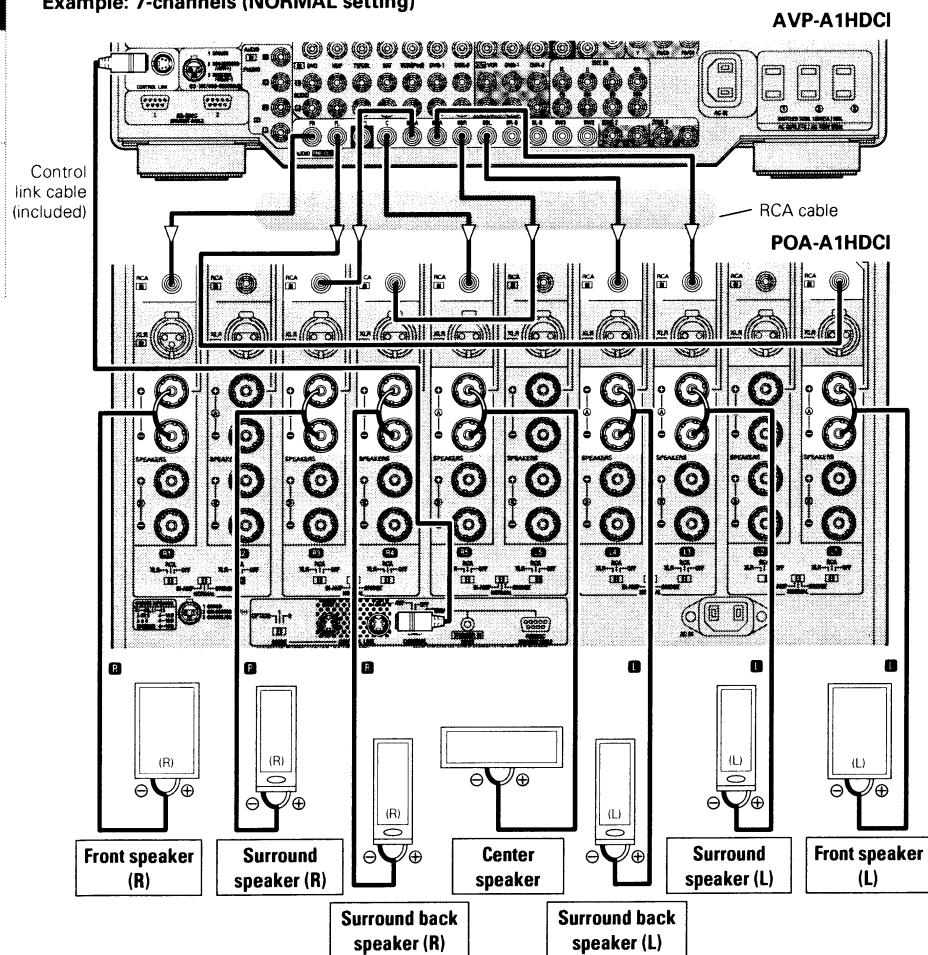

## Connecting to an XLR input terminal

Example: 7-channels (NORMAL setting)

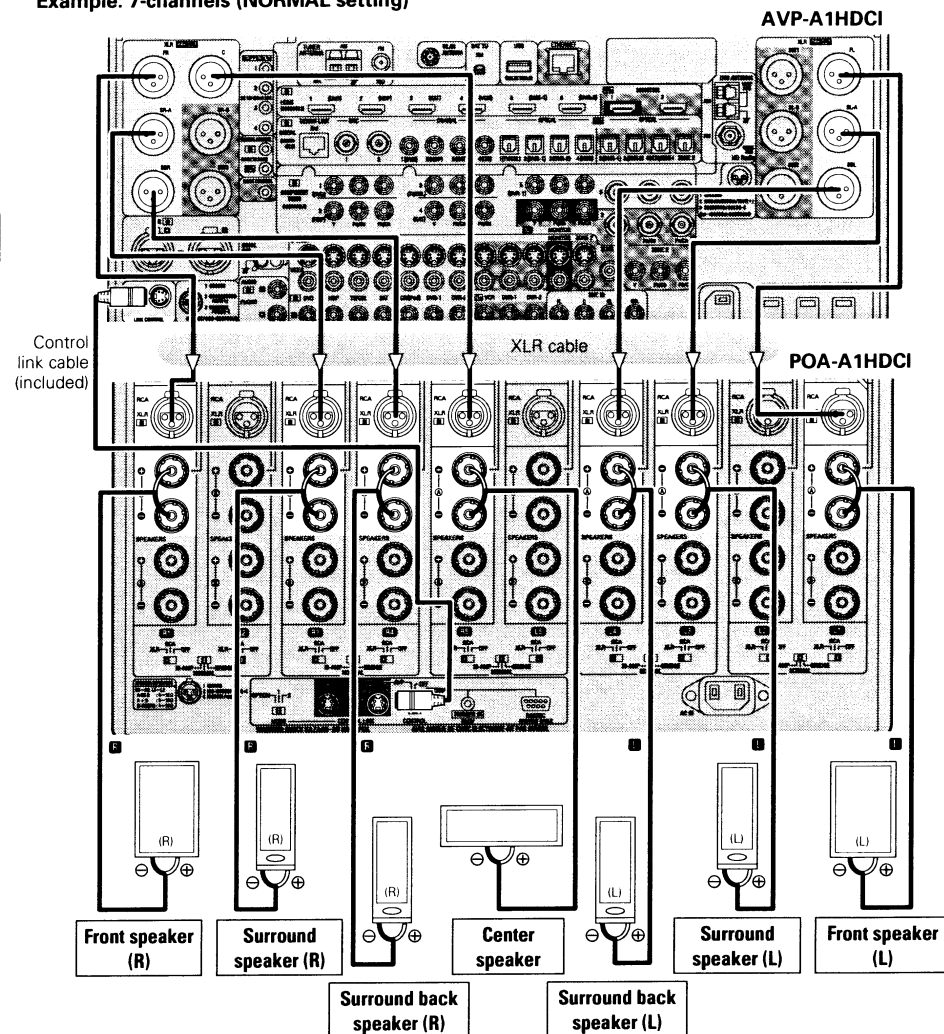

## Connecting 2 POA-A1HDCI units to the AVP-A1HDCI


The AVP-A1HDCI can be operated when connected to 2 POA-A1HDCI units.

### Settings

- 1** Connect the equipment using a control link cable.
- 2** Set **CONTROL** switch of two POA-A1HDCI units to "AVP" (☞ page 6).
- 3** Set **MODE** switch of POA-A1HDCI, which is connected to AVP-A1HDCI, to "1", and the other **MODE** switch of POA-A1HDCI to "2" (☞ page 6).



Please refer to the AVP-A1HDCI owner's manual for setup and operation instructions.

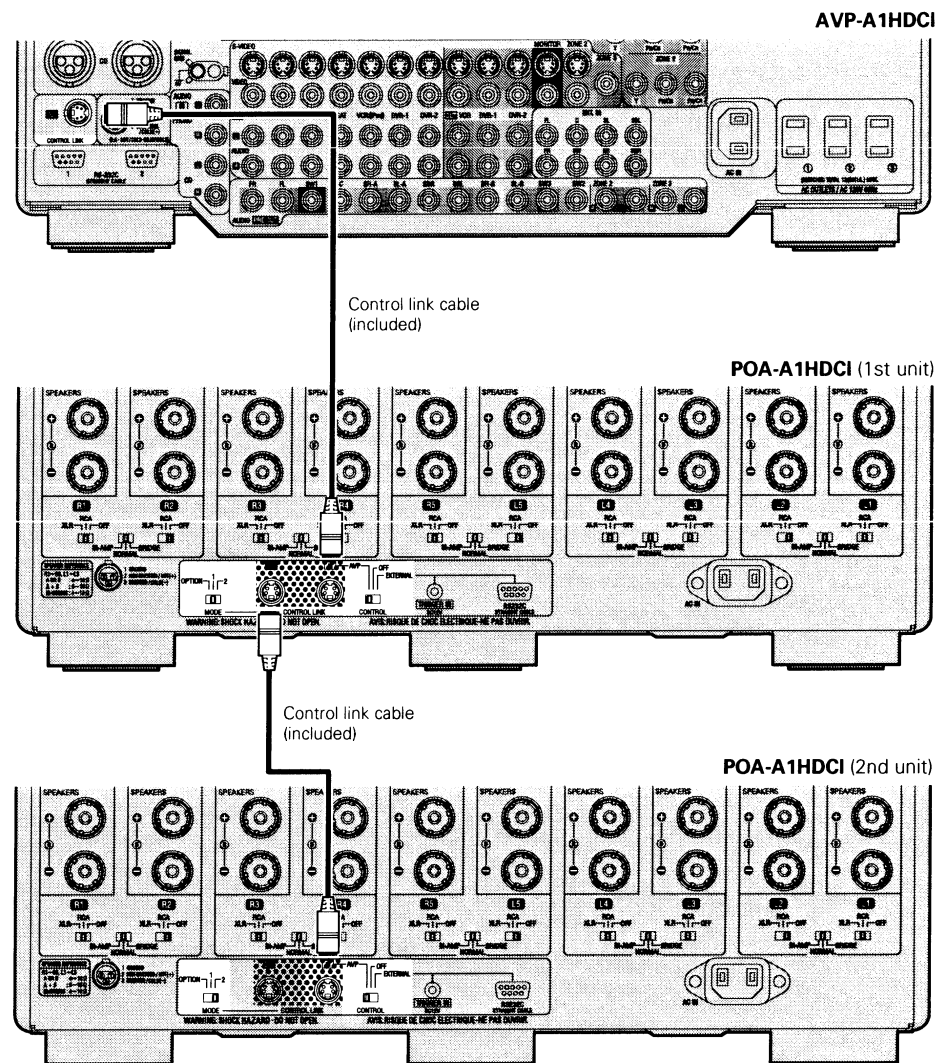

## Settings and Connections

Set the rear panel "Operation mode select switch" and "Input select switch" according to the connection method.

### NOTE

The **Operation mode select switch** and **Input select switch** must be set before turning the power on. Settings which are changed after powering on will not be registered. In such cases, the power should be switched off and on again.


## Normal Connections

Connection for signal input to each channel to be output from the channel's speaker terminal.

- Set each switch as shown below.
  - Set the **Operation mode select switch** to "NORMAL" (➡ page 6).
  - Set the **Input select switch** according to the input (➡ page 6).
    - For RCA input ..... Set to "RCA".
    - For XLR input ..... Set to "XLR".

Example: Normal connection to the **R1** channel

※Setup each channel (**L1 ~ L5**, **R1 ~ R5**) using the same steps.

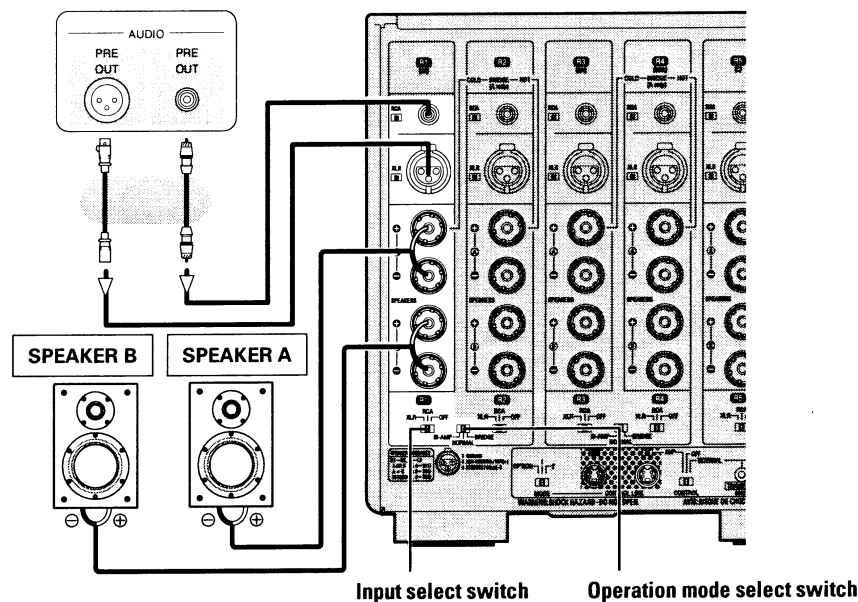


### NOTE

- The same signal is output to speakers A and B.
- Please use the following speaker impedance.
  - When using only speaker A or B ..... 4 ~ 16  $\Omega$ /ohms
  - When using speakers A and B at the same time ..... 8 ~ 16  $\Omega$ /ohms

## Bi-wiring connection

When using speakers that have input terminals for both woofer units and tweeter units, this connection allows for the same signal to be output from each unit. With this connection the interference between signals for the woofer unit and tweeter unit is low so that you can enjoy high quality sound in playback.

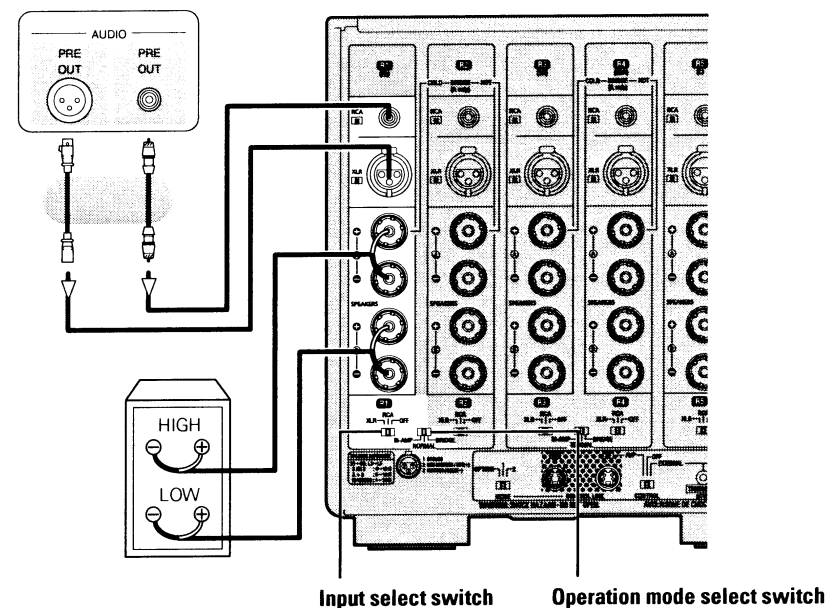

### NOTE

When using Bi-Wiring connection use 4 ~ 16  $\Omega$ /ohms speakers for the impedance.

## Bi-Amp Connections

When using speakers that have input terminals for both woofer units and tweeter units, this connection outputs one input signal from the two amps on the main unit to each of these units.

With this connection the interference between signals for the woofer unit and tweeter unit is eliminated so that you can enjoy high quality sound in playback.

- Bi-Amp output is setup using the following combination of channels. The input terminals to be used are as follows.

- **R1** and **R2** input terminal : **R2** channels
- **R3** and **R4** input terminal : **R4** channels
- **R5** and **L5** input terminal : **L5** channels
- **L3** and **L4** input terminal : **L3** channels
- **L1** and **L2** input terminal : **L1** channels

- Set each switch as shown below.


- ① Set the **Operation mode select switch** to "Bi-AMP" (☞ page 6).
- ② Set the **Input select switch** according to the input (☞ page 6).
  - For RCA input..... Set to "RCA".
  - For XLR input..... Set to "XLR".

### NOTE

The input terminal (channel **R1** in case of **R1** and **R2**) that is not used for this setting becomes invalid regardless of the status of **Input select switch**.

Example: Bi-Amp connection using **R1** and **R2** channels

※ Setup each pair channel using the same steps.

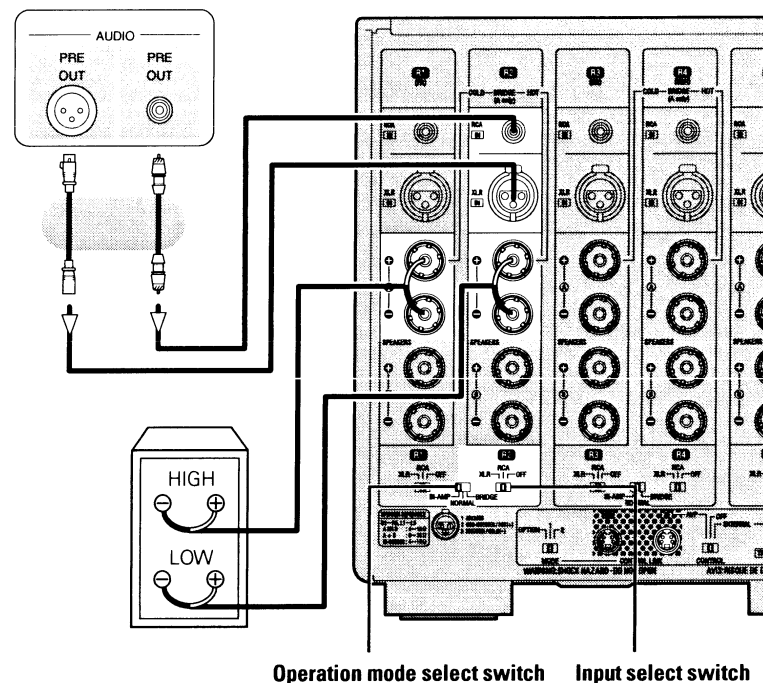

### NOTE

- The same signal is output to channel **R1** and channel **R2**.
- No signal is output from the speaker B terminal.
- Use speakers with an impedance of 4 ~ 16 Ω/ohms.

## Bridge Connections

This connection is used to use two power amps to output opposite phase signals generated from one input signal using two power amp units.

By connecting the output (+ side) of the two power amps to the speaker, a larger output than in a normal connection is possible.


- Bridge output is setup using the following combination of channels. The input terminals to be used are as follows.
  - R1 and R2 input terminal : R2 channels
  - R3 and R4 input terminal : R4 channels
  - R5 and L5 input terminal : L5 channels
  - L3 and L4 input terminal : L3 channels
  - L1 and L2 input terminal : L1 channels
- Set each switch as shown below.
  - ① Set the **Operation mode select switch** to "BRIDGE" (☞ page 6).
  - ② Set the **Input select switch** according to the input (☞ page 6).
    - For RCA input ..... Set to "RCA".
    - For XLR input ..... Set to "XLR".

### NOTE

- The input terminal (channel R1 in case of R1 and R2) that is not used for this setting becomes invalid regardless of the status of **Input select switch**.
- About output by this connection, the voltage applied to the speaker is 6 dB higher than the output when the normal connection is used. Adjust the input signal using the volume of the pre-amp when connecting.

Example: Bridge connection using R1 and R2 channels

※ Setup each pair channel using the same steps.

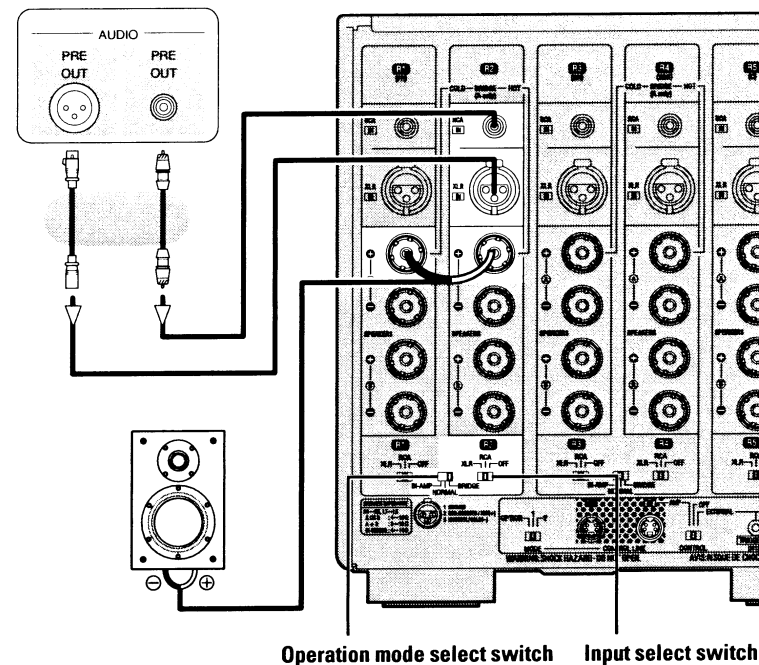


### NOTE

- No signal is output from the "-" terminal of speaker A, or the speaker B terminal.
- Use speakers with an impedance of 4 ~ 16 Ω/ohms.
- Do not connect a speaker using other than the specified combination of channels.

## Connecting the External Controller

When using the following functions, set the **CONTROL** switch to "EXTERNAL".

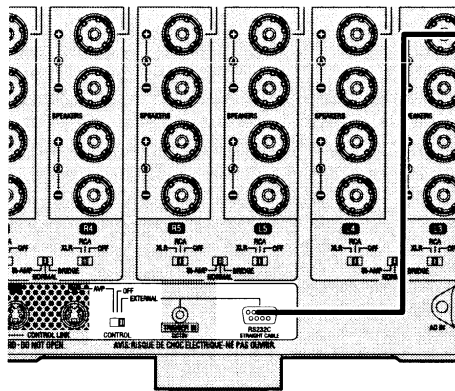


### RS-232C connector

This connector is used for an external controller.

※ If you use an external controller to operate the unit via the RS-232C terminal, you must confirm the following beforehand.

- ① Turn on the POA-A1HDCI's power.
- ② Turn off the POA-A1HDCI's power from the external controller.
- ③ POA-A1HDCI enters the standby status.

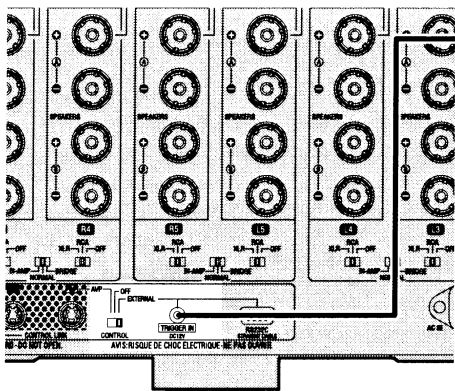


### Trigger input jacks

Connect to external equipment that has a trigger output terminal. When the equipment connected by this terminal is powered on / off, the power of the unit can be changed from on / standby.

## Connecting the Power Cord

Wait until all connections have been completed before connecting the power cord.

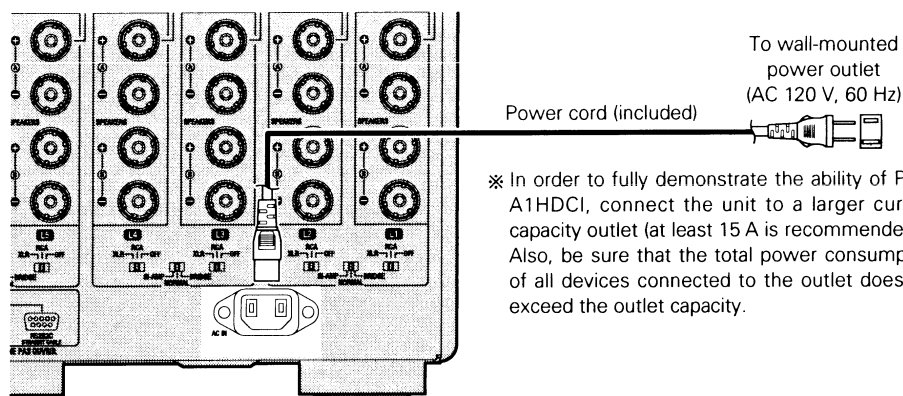

※ In order to fully demonstrate the ability of POA-A1HDCI, connect the unit to a larger current capacity outlet (at least 15 A is recommended). Also, be sure that the total power consumption of all devices connected to the outlet does not exceed the outlet capacity.

### NOTE


- Insert the AC plugs securely. Incomplete connections could cause noise.
- The power plug must be connected to a wall-mounted power outlet.
- Do not connect the unit to an integrated AC outlet on another product or to extension cord.

## Once Connections are Completed

### Turning the Power On (page 13)



[Front panel]

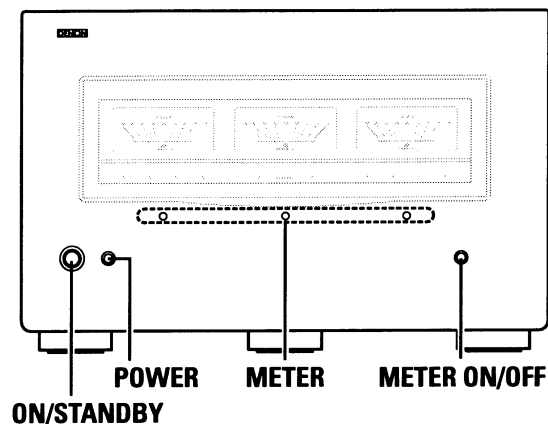

## Operations

### Turning the Power On

#### 1 Press **POWER**.

The power indicator lights red and the power is set to the standby mode.

#### 2 Press **ON/STANDBY**.

The power indicator flashes in green for several seconds and the power is turned on.

#### NOTE

Before tuning on the power, lower the sound volume of the connected equipment.

### Turning the Power Off

#### ① Press **ON/STANDBY**.

The power is set to the standby mode.

#### ② Press **POWER**.

The power indicator turns off, and so does the power.

#### NOTE

 
Power continues to be supplied to some of the circuitry even when the power is in the standby mode. When leaving home for long periods of time or when traveling, either press **POWER** to turn off the power, or unplug the power cord from the power outlet.

## Select the channel to display on the channel level meter


### Press **METER**.

The indicator of the selected channel meter turns green and the output level of the selected channel is indicated on the meter.

#### • **L channel meter select button** :



#### • **Center channel meter select button** :

 

#### • **R channel meter select button** :



- Channels for which **Input select switch** is set to "OFF" are skipped.
- In the case of bi-amp connection, the indicator of the input-side channel meter of the selected channel pair turns green.
- In the case of a bridge connection, the indicator of the channel meter of the selected channel pair turns green.

## Set the channel level meter

Set ON/OFF of all channel level meters.

### Press **METER ON/OFF**.

- **ON** : The channel level meter is illuminated and the channel level meter operates.
- **OFF** : The channel level meter illumination and the channel meter indicator turn off and the channel level meter does not operate.



The PRE AMP CONTROL LINK indicator goes off if set to "OFF" with the AVP-A1HDCI connected to the control link.



## Troubleshooting

If a problem should arise, first check the following:

1. Are the connections correct?
2. Is the set being operated as described in the owner's manual?
3. Are the other components operating properly?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

In this case, disconnect the power immediately and contact your store of purchase.

Symptom	Cause	Countermeasure	Page
Power does not turn on, or turns off directly after it was turned on.	<ul style="list-style-type: none"> <li>• Connection of the power cord is faulty.</li> </ul>	<ul style="list-style-type: none"> <li>• Check that the power plugs are securely inserted into the POA-A1HDCI's AC inlets and the wall power outlet.</li> </ul>	12
No sound is produced from speakers.	<ul style="list-style-type: none"> <li>• Connection with the input devices or connection of the speaker cables is faulty.</li> </ul>	<ul style="list-style-type: none"> <li>• Check the connections.</li> </ul>	5, 9 ~ 11
Power turns off suddenly and power indicator flashes red.	<ul style="list-style-type: none"> <li>• Protection circuit activated due to rise of internal temperature.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn off the power, wait for the set to fully cool down, then turn the power back on.</li> </ul>	5
		<ul style="list-style-type: none"> <li>• Place the set in a well-ventilated place.</li> </ul>	5
		<ul style="list-style-type: none"> <li>• First unplug the power cord, then twist the core wires tightly or terminate the speaker cables, then reconnect.</li> </ul>	5
		<ul style="list-style-type: none"> <li>• Use speakers with the specified impedance.</li> </ul>	9 ~ 11
	<ul style="list-style-type: none"> <li>• Core wires of two speakers are touching each other or a core wire is sticking out of the terminal and touching the set's rear panel, activating the protection circuit.</li> <li>• Speakers with an impedance other than specified are being used.</li> <li>• Set is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn off the power and contact a DENON service center.</li> </ul>	—

## Specifications

### Power amplifier section

#### Rated output:

##### Normal connections:

##### L1 / R1:

150 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
300 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

##### L2 / R2:

150 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
300 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

##### L3 / R3:

150 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
300 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

##### L4 / R4:

150 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
300 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

##### L5 / R5:

150 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
300 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

##### Bridge connections:

##### L1 + L2:

300 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
500 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

##### L3 + L4:

300 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
500 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

##### L5 + R5:

300 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
500 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

##### R1 + R2:

300 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
500 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

##### R3 + R4:

300 W (8 Ω/ohms, 20 Hz ~ 20 kHz with 0.05 % T.H.D.)  
500 W (4 Ω/ohms, 1 kHz with 0.7 % T.H.D.)

10 Hz ~ 100 kHz (8 Ω/ohms, +1, -3 dB (at 1 W) )

A or B 4 ~ 16 Ω/ohms

A + B 8 ~ 16 Ω/ohms

Bi-wiring 4 ~ 16 Ω/ohms

#### Frequency response:

#### Speaker output connectors:

### General

#### Power supply:

#### Power consumption:

#### Maximum external dimensions:

#### Weight:

AC 120 V, 60 Hz

12 A

0.3 W (Standby)

434 (W) x 281 (H) x 530 (D) mm (17-3/32" x 11-1/16" x 20-55/64")

60 kg (132 lbs 4 oz)

**DENON**

[www.denon.com](http://www.denon.com)

Denon Brand Company, D&M Holdings Inc.  
Printed in Japan 00D 511 4608 005

## DENON SERVICE NETWORK / 服務網絡

- Please consult the outlet where the equipment was purchased.
- Bitte wenden Sie sich an den Händler, bei dem Sie das Produkt gekauft haben.
- SVP veuillez consulter votre revendeur.
- Neemt u alstublieft contact op met het verkooppunt waar u de apparatuur heeft gekocht.
- Por favor consulte en el establecimiento donde compró el equipo.
- Vänligen ta kontakt med butiken där du köpt utrustningen.
- Rivolgetevi al rivenditore che vi ha venduto l'apparecchio.
- Contacte a loja onde comprou o equipamento.
- 請向你購入本機的商號查詢。
- 請向你所購買本機的商行查詢。


<b>Australia</b>	Audio Products Group Pty Ltd. 67 O'Riordan Street Alexandria NSW 2015, PO Box 150, Mascot NSW 1460 Australia Tel: 1300 134 400 Fax: +61 2 9578 0159
<b>Austria</b>	Digital-Professional-Audio Vertriebsges.m.b.H., Seeböckgasse 59, A-1160 Wien Tel: 01-480-1006 Fax: 01-485-7679
<b>Belgium</b>	Transtel-Sabima P.V.B.A. Duboisstraat 48, B-2060 Antwerpen, Belgium Tel: 03-237-3607
<b>Canada</b>	D&M CANADA INC. 5-505 Apple Creek Blvd., Markham, Ontario, L3R 5B1 Tel: 905-475-4085 Fax: 905-475-4159
<b>China</b>	电音数码音响贸易(上海)有限公司 上海市淮海中路887号永新大厦6010室 电话:(021)64372299 传真:(021)64339973 邮编: 200020 天龙客户服务热线: 021-62949285
<b>Czech republic</b>	EUROSTAR OSTRAVA s.r.o. areal Vodni stavby Praha, budova A2 Dobronicka 635, 148 00 Praha 4 Czech Rep. Tel: 261-112-901 Fax: 261-112-904
<b>Denmark</b>	Hifi Klubben A/S Dali Alle 1, 9610 Noerager, Denmark Tel: 45-96 72 10 00 Fax: 45-96 72 10 14
<b>Finland</b>	Soundata Oy Hameentie 157 5th floor 00560 Helsinki Finland Tel: +358-(0)9-4769 3300 Fax: +358-(0)9-4769 3310
<b>France</b>	DENON FRANCE A division of D&M France SAS Tour Ventose, 2 rue des Bourets, 92156 Suresnes Cedex, France Tel: +33(0)1-41-383230 Fax: +33(0)1-41-380110
<b>Germany</b>	DENON DEUTSCHLAND A division of D&M Germany GmbH An der Landwehr 19, D-41334 Nettetal, Germany Tel: +49(0)2157-1208-0 Fax: +49(0)2157-1208-15
<b>Greece</b>	KINOTECHNIKI LTD. 14, PYRGOU STR. 166 75, GLYFADA ATHENS Tel: +30 210 960 1071 Fax: +30 210 960 1072
<b>Hong Kong</b>	D&M Sales and Marketing (H.K.) Ltd. Unit 501, Ocean Centre, Harbour City, 5 Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: 852-2516-5864 Fax: 852-2516-5940
<b>Hungary</b>	香港九龍尖沙咀廣東道5號海港城海洋中心5樓501室 電話: 852-2516-5864 傳真: 852-2516-5940
<b>Iceland</b>	A.I.D.A. Audio Kft. 1112 Budapest Olt u. 37. Hungary Tel: 01-248-2030 Fax: 01-248-2039
<b>India</b>	Einar Farestveit & co hf., Borgartun 28, P.Box 5440, 125 Reykjavik. Tel: +354 5207900 Fax: +354 5207910
<b>Indonesia</b>	PROFX SERVICE CENTRE Advanced Audio Solutions (Bangalore)Pvt. Ltd. No 53, K.H.Road, Opp. Big Bazaar, Bangalore - 560 027, India Tel: 080 3297 0853 Fax: 080 2211 2043
<b>Israel</b>	PT Autoaccindo Jaya. Cideng Barat No. 7 Jakarta, Indonesia Tel: +62-21-633-2730 Fax: +62-21-632-2886
<b>Italy</b>	Newpan Ltd. 14 Rosansky st. Rishon Lezion 75706, Israel. Tel: +972-3-953-5900 Fax: +972-3-961-6193
<b>Korea</b>	Audiodelta S.r.l. 19 Via Pietro Calvi 20129 Milano Italy Tel: 39-02-5411-6008 / 39-02-5412-8253 Fax: 39-02-5412-0258
<b>Malaysia</b>	D&M Sales and Marketing Korea Ltd. Chung Jin B/D., 10F, 53-5, Wonhyoro 3 Ga, Yongsan-Gu, Seoul, 140-719, Korea Tel: 02-715-9041 Fax: 02-715-9040
<b>Mexico</b>	Wo Kee Hong Trading Sdn Bhd. 2nd Floor, (Left Wing), Bangunan Infinite Centre, Lot 1, Jalan 13/6, 46200 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: 03-7954-8088 Fax: 03-7954-7088
<b>Netherlands</b>	Labrador, S.A. de C.V. Callejon del Naranjo 35, Naucalpan, 53560, Edo. Mex., Mexico Tel: 52-5359-5161 Fax: 52-5357-1775
<b>New Zealand</b>	Penhold B.V. Poppenbouwing 58, NL-4191 NZ Geldermalsen, Netherland Tel: 31-345-588 080 Fax: 31-345-588 085
<b>Norway</b>	Avalon-Pacific Marketing Limited. 15C Vestey Drive, Mt Wellington, Auckland, New Zealand. PO Box 11 631 Ellerslie, Auckland, New Zealand Tel: +64-9-573-5933 Fax: +64-9-573-3720
<b>Philippines</b>	Hi-Fi Klubben Marcus Thranes gate 4-6, 0473 Oslo, Norway Tel: +47 22 80 63 10 Fax: +47 22 80 63 29
<b>Poland</b>	Lotteworld Audio Video Systems Incorporated CET Building Mezzanine Floor No. 4 Mindanao Avenue, Barangay Bahay Toro, Project 8, Quezon City, Philippines. Tel: +632-929-5334 Fax: +632-929-1343
<b>Portugal</b>	HORN DISTRIBUTION S.A. Ulica Kurantow 34, 02-873 Warszawa Poland Tel: +48 22 331 55 33 Fax: +48 22 331 55 00
<b>Singapore</b>	Videoacustica. Qta. Do Paizinho-Armazém 5-Estrada De Circunvalação-Apart. 3127 1303 Lisboa Codex Tel: +351 214241770 Fax: +351 214188093
<b>Slovakia</b>	ALL (E&E) Service Center Pte Ltd. Machtech Industrial Building, #06-04, No.2, Kallang Pudding Road, Singapore 349307 Tel: 6747-8274 Fax: 6748-9007
<b>South Africa</b>	BIS AUDIO s.r.o. Dobronivská cesta 1642/6 960 01 Zvolen Tel:045-5400 703 Fax:045-5400 704
<b>Spain</b>	Mandarin Distributors S.A. 10 Thora Crescent, Wynberg Ext.3 Sandton, P.O.Box 5137, Johannesburg Republic of South Africa Tel: 27-11-444-8445 Fax: 27-11-444-8363
<b>Sweden</b>	Gaplasa S.A.AV. Ing. Conde de Torroja, 25, 28022 Madrid Tel: 91-746-00-45 Fax: 91-329-44-57
<b>Switzerland</b>	Hi-Fi Klubben Göteborg Skänegatan 25, 41252 Göteborg Tel:031 33 51010 Fax:031 33 51019
<b>Taiwan R.O.C.</b>	DKB household AG, Abteilung Elektronik. Eggbühlstrasse 28, CH-8052 Zürich, Switzerland Tel: 01-306-1626 Fax: 01-306-1690
<b>Thailand</b>	D&M Sales and Marketing Taiwan Ltd. 6F-2 NO148, Songjiang Rd., Taipei City 10458, Taiwan R.O.C. Tel: 02-2522-1308 Fax: 02-2100-1175
<b>Turkey</b>	Mahajak Development Co., Ltd. 46 Mahajak Building, Sukhumvit Soi 3 (Nana-Nua) Klongtoey, Wattana, Bangkok Thailand. 10110 Tel: 66-2-256-0020 Fax: 66-2-253-1696
<b>U.A.E.</b>	Ertekin elektronik t.c. ve san. a.s. Galipdede Caddesi No.: 113 Kuledibi-Karaköy / Istanbul, Turkey Tel: +90(212)293-9515 Fax: +90(212)249-3512
<b>Ukraine</b>	V.V. & SONS L.L.C. Street No-11/B, Road NO-128, Shed No-39 Al Khabisi, Deira, Dubai, U.A.E Tel: +971-4-266-2435, 268-4575 Fax: +971-4-266-2052
<b>United Kingdom &amp; Eire</b>	Mirs Ltd. Osipova str. 37/Office 1, 65012 Odessa, Ukraine Tel: +380 (482) 305530 Fax: +380 (482) 305555
<b>U.S.A.</b>	DENON UK A division of D&M Audiovisual Ltd. Moorbridge House, Padbury Oaks, 579 Bath Road, Longford, Middlesex, UB7 0EH, United Kingdom Tel: +44(0)1753-680568 Fax: +44(0)1753-689697
<b>Vietnam</b>	DENON ELECTRONICS (USA), LLC (a D&M Holdings Company) 100 Corporate Drive, Mahwah, NJ 07430-2041 Tel: 800-497-8921 Fax: 888-544-8434
	Anh Duy Manufacturing -- Trading Co., Ltd. 170 Ung Van Kheim St., Ward 25, Blinh Thanh Dist., HCMC, Vietnam Tel: +84 8 898 3424 Fax: +84 8 898 3425

- \* If there is no service center in your local area, please contact one of our overseas service centers, listed above, for follow-up service consultation.
- \* Ist kein Service-Center in Ihrer Nähe, setzen Sie sich bitte mit einem der hier aufgelisteten Adressen in Verbindung.
- \* Si il n'y a pas de station technique proche de chez vous, veuillez contacter nos l'un de nos centres techniques, listés ci-dessous, pour toutes demandes techniques.
- \* Als er geen servicecenter bij u in de buurt is, neem dan contact op met een van onze bovengenoemde servicecenters voor ondersteuning.
- \* Si no hay un servicio técnico en su zona, por favor contacte con uno de los servicios técnicos centrales, indicados abajo, para realizar un seguimiento de su consult.
- \* Om det inte finns någon auktoriserad Denon-verkstad där du bor, kontakta en av våra internationella servicecentra (se ovan).
- \* Se non ci sono dei centri assistenza autorizzati nella vostra zona, potete fare riferimento agli altri centri assistenza autorizzati, vedi elenco sopra, per qualsiasi consultazione tecnica.
- \* Caso não exista um centro de assistência técnica na sua área, consulte um dos centros acima apresentados
- \* 如若當地並無服務中心，請據上表所列本公司海外服務中心查詢售後服務事宜。
- \* 若当地无服务中心，请联系上述所列我们的海外服务中心，以便跟踪服务咨询。

**DENON**

www.denon.com

Denon Brand Company, D&M Holdings Inc.

Printed in Japan 00D 515 0921 908  709

# DENON<sup>®</sup>

## LIMITED WARRANTY

### (USA / CANADA)

	PAGE
USA (ENGLISH)	2
CANADA (ENGLISH)	3
CANADA (FRENCH)	4

USA		
<b>DENON ELECTRONICS (USA), LLC</b> (a D&M Holdings Company) 100 Corporate Drive Mahwah, NJ 07430-2041 (800) 497-8921 (888) 544-8434 Fax		
<b>DENON REGIONAL SUPER SERVICE CENTERS (Repair only-No parts orders please)</b>		
<b>PYRAMID AUDIO</b> 305 E. Braker Lane Austin, TX 78753-2746 (512) 458-8292 (512) 453-4542 Fax	<b>UNITED RADIO SERVICE</b> 5717 Enterprise Parkway E. Syracuse, NY 13057-2905 (800) 634-8606 (315) 446-8505 Fax	<b>AUDIO SERVICES</b> 544 Central Dr., Suite 101 Virginia Beach, VA 23454-5245 (757) 498-8277 (757) 498-9554 Fax
<b>INNER SOUND</b> 1416 S.E. Morrison Street Portland, OR 97214-2646 (503) 238-1955 (503) 238-1787 Fax	<b>NORMAN'S ELECTRONICS</b> 3653 Clairmont Road Atlanta, GA 30341-4907 (770) 451-5057 (770) 455-8337 Fax	<b>GOLD CROWN ELECTRONICS</b> Victoria Business Park 129 E. Savarona Way Carson, CA 90746-1406 (310) 538-8282 (310) 538-8281 Fax
<b>SERVICE WIDE TECHNOLOGIES</b> 2239 Curtiss Street Downers Grove, IL 60515-4010 (630) 969-7333 (630) 969-7330 Fax	<b>ELECTRONICE EXPRESS</b> 1809 E. Fabyan Parkway West Chicago, IL 60185 (630) 208-4600 (630) 208-4601 Fax	

CANADA
<b>D&amp;M CANADA INC.</b> 5-505 Apple Creek Boulevard Markham Ontario, L3R 5B1 (905) 475-4085 (905) 475-4159 Fax

This warranty will be honored only in the U.S.A

# DENON®

## LIMITED WARRANTY

### Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by DENON ELECTRONICS (USA), LLC remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED DENON ELECTRONICS (USA), LLC DEALER.

#### Product Category

A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	YEAR(S)
DVD Receiver, DVD Home Theater System			ADV, S	1	
Digital Surround Decoder			AVD	3	
Pre-Amplifier, Digital Pre-Amplifier Power-Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Tuner, Integrated Amplifier			TU, PMA	3	
CD Player, DVD Player			DCD, DCM, DP, DA, DVD, DVM	1	
Tape Recorder, CD Recorder, MD Recorder			DRM, DRR, DRS, DRW, CDR, CDRW, DMD	1	
System Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-A, D-F, D-G, D-M, CDR-M, DRR-M, S	1	
Turntable	1	Autolift / Manual	DP-L, DP-M	4	
	2	Full Automatic	DP-F	2	
Speaker			SC	1	
Sub-woofer			DSW	2	
Network Multimedia Server / Client (Hard Disc Only)	1	Excluded Hard Disk Drive Unit	NS	3	
	2	Hard Disk Drive Unit	-	1	
Microphone			DM-S	2	
Control Dock for iPod®			ASD	1	
Headphone			AH-D, AH-C	1	
Cartridge			DL	90	DAYS
Remote Controller			RC	90	

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

### What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in the U.S.A. by DENON ELECTRONICS (USA), LLC. (2) Any product which is not purchased in the U.S.A. from an authorized DENON dealer, unless the product is purchased through the U.S.A. Military Exchange Service where the Warranty will be One (1) year for all products listed above except in the case of Cartridges, Accessories, Remote Controller and Headphone which will remain at 90 days. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact DENON as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside the U.S.A. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

### What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

### How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or DENON ELECTRONICS (if you are uncertain as to whether a service station is DENON authorized, please contact DENON as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service:

- You are responsible for transporting your unit or arranging for its transportation.
- If shipment of your unit is required:  
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
- WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.**
- You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem. In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN THE U.S.A. ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from state to state. This Warranty may not be altered other than in a writing signed by an officer of Denon Electronics USA, LLC.

**DENON ELECTRONICS (USA), LLC**  
(a D&M Holdings Company)  
100 Corporate Drive  
Mahwah, NJ 07430-2041  
(800) 497-8921  
[www.usa.denon.com](http://www.usa.denon.com)

This warranty will be honored only in Canada.

# DENON<sup>®</sup>

## LIMITED WARRANTY

### Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by D&M CANADA INC. remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED D&M CANADA INC. DEALER.

#### Product Category

Turntable	1	Autolift	DP-L	4	YEARS
	2	Full Automatic	DP-F	2	
Tuner, Integrated Amplifier			TU, PMA	3	
Pre-Amplifier, Digital Pre-Amplifier Power-Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Digital Surround Decoder			AVD	3	
Network Multimedia Server / Client	1	Excluded Hard Disk Drive Unit	NS	3	
	2	Hard Disk Drive Unit	-	1	
A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	
DVD Receiver, DVD Home Theater System			ADV, S	1	
CD Player, DVD Player			DCD, DCM, DP, DA, DVD, DVM	1	
Tape Recorder, CD Recorder, MD Recorder			DRM, DRR, DRS, DRW, CDR, CDRW, DMD, DTR	1	
System Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-M, D-A, D-G, CDR-M, DRR-M, S	1	
Speaker			SC	1	
Sub-woofer			DSW	2	
Karaoke System			DCG, HMA	1	
Microphone			DM-S	2	
Control Dock for iPod <sup>®</sup>			ASD	1	
Headphone			AH-D, AH-C	1	
Cartridge, Accessories			DL, AU, DM-K, DME	90	DAYS
Remote Controller			RC	90	

### What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in Canada by D&M CANADA INC. (2) Any product which is not purchased in Canada from an authorized DENON dealer. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact D&M CANADA INC. as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside Canada. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

### What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

### How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or D&M CANADA INC. (if you are uncertain as to whether a service station is DENON authorized, please contact D&M CANADA INC. as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service:

- You are responsible for transporting your unit or arranging for its transportation.
- If shipment of your unit is required:  
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
- WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
- You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem. In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

### THIS WARRANTY IS VALID IN CANADA ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from province to province. This Warranty may not be altered other than in a writing signed by an officer of D&M Canada Inc.

**D&M CANADA INC.**  
5-505 Apple Creek Boulevard  
Markham, Ontario  
L3R 5B1  
(905) 475-4085  
www.denon.ca

Cette garantie ne sera honorée qu'au **Canada**.

# DENON®

## GARANTIE LIMITÉE

### Durée du garantie non-transférable

La garantie de votre produit DENON, distribué et garanti par D&M CANADA INC. prend effet à partir de la date d'achat du consommateur original auprès d'un revendeur officiel D&M CANADA INC. pendant les périodes suivantes.

#### Catégorie de produit

Table tournante	1	Levée auto	DP-L	4	ANNÉES
	2	Auto complet	DP-F	2	
Syntoniseur, amplificateur intégré			TU, PMA	3	
Préamplificateur, préamplificateur numérique			PRA, AVP, DAP, POA, HA	3	
Amplificateur de puissance, Préamplificateur phono				3	
Décodeur surround numérique			AVD	3	
Serveur / Client de réseau multimédia	1	Excluant le mécanisme du disque dur	NS	3	
	2	Le mécanisme du disque dur	-	1	
Contrôleur A / V, Récepteur A / V, Récepteur AM / FM			AVC, AVR, DRA	2	
Récepteur DVD, Système DVD Home Theater			ADV, S	1	
Lecteur CD, Lecteur DVD			DCD, DCM, DP, DA, DVD, DVM	1	
Magnétocassette, Enregistreur CD, Enregistreur MD			DRM, DRR, DRS, DRW, CDR, CDRW, DMD, DTR	1	
Système Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-M, D-A, D-G, CDR-M, DRR-M, S	1	
Haut-parleurs			SC	1	
Sub-woofer			DSW	2	
Systèmes Karaoke			DCG, HMA	1	
Micro			DM-S	2	
Dock de contrôle pour iPod®			ASD	1	
Casque d'écoute			AH-D, AH-C	1	
Cellule phonolectrice, Accessoires			DL, AU, DM-K, DME	90	JOURS
Télécommande			RC	90	

Apple et iPod sont des marques commerciales d'Apple Computer, Inc., déposées aux Etats-Unis et dans d'autres pays.

### Couverture

Cette garantie couvre tous les défauts de matériel ou de fabrication du produit, à l'exception de ceux indiqués ci-après qui conformément selon les termes durant la période de la garantie. Ne sont pas couverts par la garantie: (1) Tout produit qui n'est pas distribué au Canada par D&M CANADA INC. (2) Tout produit qui n'a pas été acheté au Canada auprès d'un revendeur officiel DENON (Note: On peut identifier les revendeurs officiels DENON par leur auto-collant "REVENDEUR OFFICIEL DENON" affiché dans leur magasin. Si vous doutez qu'un revendeur soit officiellement reconnu, contactez D&M CANADA INC. à l'adresse ci-dessous.) (3) Tout produit dont le numéro de série a été effacé, modifié ou enlevé. (4) Dommages dus à la détérioration ou à un fonctionnement défectueux à la suite de: a) accident, acte de la nature, abus, utilisation impropre, négligence, réparation au moyen d'un produit non autorisé, débalé, modification, emploi contraire aux instructions fournies avec le produit, b) réparation ou tentative de réparation par quelqu'un non reconnu par DENON. c) tout envoi du produit (la réclamation doit être présentée au transporteur), (5) Articles sujets à détérioration par l'usage (têtes de magnétophone, cellules phono, pointes de lecture phono, piles, etc.). (6) Vérification périodique qui ne révèle aucun défaut. (7) Utilisation du produit hors du Canada. (8) Bandes magnétiques, disques CD ou DVD endommagés. (9) Utilisation commerciale, industrielle ou professionnelle. (10) Toutes charges d'installation ou de déplacement résultant d'un défaut du produit.

### Notre paiement

Si votre produit DENON est reconnu défectueux par DENON durant la période d'application de la garantie après la date d'achat du consommateur, DENON réparera ou, à son choix, remplacera avec un modèle neuf, usagé ou équivalent ce produit défectueux sans frais de pièces ni de main d'œuvre.

### Exécution de la garantie

Si votre produit nécessite service, il peut être envoyé à tout atelier de service officiel DENON ou chez D&M CANADA INC. (Si vous doutez que l'atelier de service soit officiellement reconnu, contactez D&M CANADA INC. à l'adresse ci-dessous). Dans tous les autres cas, les procédures suivantes s'appliquent si votre article doit être transporté pour un service sous garantie.

- Vous êtes responsable du transport de votre article ou vous devez vous arranger vous-même pour son transport.
- Si votre article doit être envoyé, vous devez payer les frais d'envoi initiaux, mais nous payerons les frais de retour si la garantie couvre les réparations.
- LORSQUE VOUS RENVOYEZ VOTRE ARTICLE POUR UN SERVICE SOUS GARANTIE, VOUS DEVEZ JOINDRE UNE COPIE DE LA FACTURE D'ACHAT D'ORIGINE.**
- Vous devez inclure également vos nom, adresse, numéro de téléphone de jour, numéros de modèle et de série du produit et une description du problème. Dans le cas d'un lecteur CD ou DVD, joindre un disque que l'appareil n'a pu lire pour test. Il vous sera retourné avec l'article.

### CETTE GARANTIE EST VALABLE SEULEMENT AU CANADA.

Si votre produit ne requiert aucun service mais que vous avez des questions quant à son fonctionnement, contactez notre département technique dont l'adresse figure ci-dessous.

CETTE GARANTIE EST EXPRESSÉMENT FAITE EN LIEU ET PLACE DE TOUTES LES AUTRES GARANTIES EXPRIMÉES OU SOUS-ENTENDUES Y COMPRIS, SANS SE LIMITER À CELLES-CI, LES GARANTIES MARCHANDES ET SPÉCIFIQUES POUR UN USAGE PARTICULIER.

NOTRE RESPONSABILITÉ SE LIMITE À LA RÉPARATION OU AU REMPLACEMENT, À NOTRE CHOIX, DE TOUT PRODUIT DÉFECTUEUX ET N'INCLUT EN AUCUN CAS DES DOMMAGES FORTUITS, COMMERCIAUX INDIRECTS NI MATÉRIELS D'AUCUNE SORTE. NOUS NOUS SOMMES PAS RESPONSABLES POUR LA PERTE DE LES PRODUITS ET/OU LES MARCHANDISES ENDOMMAGÉES PENDANT LE TRANSPORT DES BIENS.

CERTAINES PROVINCES NE PERMETTENT PAS DE LIMITES QUANT À LA DURÉE D'UNE GARANTIE SOUS-ENTENDUE ET/OU NE PERMETTENT PAS L'EXCLUSION DE DOMMAGES FORTUITS. LES LIMITATIONS ET EXCLUSIONS MENTIONNÉES PLUS HAUT PEUVENT NE PAS S'APPLIQUER À VOTRE CAS.

Cette garantie vous donne des droits légaux spécifiques, mais il se pourrait que vous ayez d'autres droits qui varient d'une province à l'autre. La garantie ne peut être modifiée que par un document signé par un gestionnaire autorisé de D&M Canada.

### D&M CANADA INC.

5-505 Apple Creek Boulevard  
Markham, Ontario  
L3R 5B1  
(905) 475-4085  
www.denon.ca